

# Thermal Analysis

# **Preparation Checklist**

- Site Requirements
- Peripherals and Accessories
- Electrical Requirements
- Gas Requirements
- Environmental Requirements
- Safety Requirements
- PC Configuration
- Installation Overview
- Miscellaneous

# DMA 8000: Site Readiness Instructions

#### **Order Overview**

Please review this order. Record any discrepancies between the PerkinElmer order and your Purchase Order, along with any agreements or commitments made by your PerkinElmer Sales Representative that are NOT listed on the order. Let your Customer Care Representative know about these discrepancies and/or commitments with your Site Readiness Confirmation.

# **Site Requirements:**

# **Bench Space**

| Instrument | Dimensions |           |           |          |
|------------|------------|-----------|-----------|----------|
| Instrument | Width      | Depth     | Height    | Weight   |
| DMA 8000   | 54 cm      | 32 cm     | 41 cm     | ~15 kg   |
|            | (21 in)    | (12 in)   | (16 in)   | (33 lbs) |
| Computer   | 42.5 cm    | 49 cm     | 49 cm     | 21.0 kg  |
|            | 17.0 in    | (19.0 in) | (19.0 in) | (48 lbs) |

A bench top of approximately 60 cm (21 in) W x 32 cm (12 in) D will accommodate a DMA Analyzer with no accessories. With accessories (Bath Accessory, Humidity Generator or LN2 dewar) additional bench space will be required.

### NOTE:

- The one (1) liter dewar, can be placed on either side of the analyzer. It must be filled less than ½ hour before performing the installation check of PMMA.
- The Humidity Generator must be placed to the left of the DMA. Deionized or distilled water is required.
- The Bath Accessory fits under the DMA and extends out from the front of the analyzer approximately 8-10 inches (20-26 cm). The Bath Accessory must be located on a flat surface.



# **Peripherals and Accessories:**

| Accessories           | Dimensions                     |                    |                  |                   |
|-----------------------|--------------------------------|--------------------|------------------|-------------------|
| Accessories           | Width                          | Depth              | Height           | Weight            |
| 1 liter dewar         | 10 cm<br>(4 in)<br>(Diameter)  |                    | 31 cm<br>(12 in) | 0.9 kg<br>(2lbs)  |
| 50 liter<br>dewar     | 60 cm<br>(24 in)<br>(Diameter) |                    | 71 cm<br>(28 in) | 7 kg<br>(15.4lbs) |
| Bath<br>Accessory     | 17cm<br>(6.5 in)               | 42 cm<br>(16.5 in) | 13 cm<br>(5 in)  | 4.5 kg<br>(10lbs) |
| Humidity<br>Generator | 37 cm<br>(14.5 in)             | 17 cm<br>(7 in)    | 35 cm<br>(14 in) | 14 kg<br>(31lbs)  |

# **Electrical Requirements:**

| Power Consumption     |                   |
|-----------------------|-------------------|
| DMA 8000              | 300 VA Maximum    |
| Computer              | 500 Watts Maximum |
| Bath Accessory        | 200 Watts Maximum |
| Humidity<br>Generator | 150 Watts Maximum |

| Power Specifications  |   |  |
|-----------------------|---|--|
| DMA 8000              | 100/120 VAC, 2.0 Amps or 230 VAC, 2.0 Amp |  |
| Computer              | 100/115 VAC, 4.6 Amps or 230 VAC, 2.3 Amp |  |
| Bath Accessory        | 40VDC 5A from DMA                         |  |
| Humidity<br>Generator | 100/120 VAC, 2.0 Amps or 230 VAC, 2.0 Amp |  |

This equipment is designed to operate within  $\pm 10\%$  of the selected line voltage.

The supply must be smooth, clean and free of transient voltages over 40 volts.

Earth grounding: less than 1 ohm resistance between the grounds of any two components of the system.



Grounding circuit continuity is vital for safe operation of equipment. Never operate equipment with grounding conductor disconnected

All outlets must share a common earth ground.

| Power Outlets         |   |  |
|-----------------------|---|--|
| DMA 8000              | 100/120 VAC, 2.0 Amps or 230 VAC, 2.0 Amp |  |
| Computer              | 100/115 VAC, 4.6 Amps or 230 VAC, 2.3 Amp |  |
| Bath Accessory        | 40VDC 5A from DMA                         |  |
| Humidity<br>Generator | 100/120 VAC, 2.0 Amps or 230 VAC, 2.0 Amp |  |

# **Gas Requirements:**

The DMA does not require a purge gas to perform the installation. If gases are required for a specific application the gases and regulators MUST be supplied by customer. (Caution: High flow rates >100 cc/min can result in noisy thin film or fiber data).

## **Environmental Requirements:**

# **Laboratory Environment**

### **Recommended operating conditions:**

- Indoors, non-explosive environment.
- The location must be free of smoke, dust, corrosive fumes, direct sunlight and excessive vibration.
- Temperature: +10 °C to +35 °C (+50°F to +95°F).
- Relative humidity: 20% to 80%, without condensation.
- Altitude: in the range 0 m to 2,000 m (sea level to 6,562 feet).

### Safe operating conditions:

- Indoors, non-explosive environment.
- Temperature: +5 °C to +40 °C (+41 °F to +104 °F).
- Relative humidity: 20% to 80%, without condensation.
- Altitude: in the range 0 m to 2,000 m (sea level to 6,562 feet).

### Storage conditions:

- Ambient temperature: -20 °C to +60 °C (-4 °F to +140 °F).
- Relative humidity: 20% to 80%, without condensation.
- Altitude: in the range 0 m to 12,000 m (sea level to 39,370 feet).

# Clean and Dust-free

Indoor use only on level, securely mounted bench and vibrationfree work surface. A suitable bench should not visibly move when the user presses on it. The bench must be located where it does not present a hazard to people passing through the work area.

## **Safety Requirements:**

#### **Electrical Considerations**

High voltages are associated with the power supplies. Never run the analyzer without the covers in place.

### Gas Cylinders and Gas Delivery Lines

Lock down straps should be present on all gas cylinders.

#### Ventilation

Do not operate the DMA8000 in an enclosed environment without adequate ventilation.

The LN2 dewar system used with the DMA emits a small amount of nitrogen during normal operations. If your laboratory is not properly ventilated, the level of oxygen in the laboratory may fall below the normal range. Please follow the applicable laboratory ventilation standards to ensure that an appropriate oxygen level is maintained.

#### Other Considerations

The furnace (environmental chambers) are capable of obtaining temperatures in excess of 400 °C, and use of LN2 is also possible, both can result in burns.

# **PC Configuration:**

Due to numerous differences in PC hardware, PerkinElmer cannot guarantee that our software will run on a customer-supplied computer.

PerkinElmer installation of a customer-supplied computer is available for an additional fee.

PerkinElmer is not responsible for problems caused by unspecified system components, software, and/or accessories. A maximum of 1 hour is allowed for installation of a computer and software of a non-PerkinElmer supplied computer. The additional time it takes to verify this type of problem is billable at the current service rate. It is advisable the customer's IT support be available as needed.

**Software:** As per requirement.

### **Installation Overview:**

On receipt of the equipment, the customer is to inspect the packaging for physical damage. If damage is present the shipping container should be opened to verify no physical damage to the instrument has occurred and the customer must notify the shipper immediately.

NOTE: Unpacking will ONLY be performed by approved PerkinElmer personnel and contents inventoried.

## **Physical Installation** (Instrument Only)

The physical installation will vary based on system configuration. Purge gas and coolant are not required to complete the installation. If these utilities are not present at the time of installation and the service engineer is required to make a return trip to connect purge gas and coolant, the return trip and time will be billable at the prevailing service rates.

#### **Physical Installation (Accessories)**

As Required

#### **Installation Test Standards**

Our Service Engineer will test the instrument in order to insure that its functionality meets PerkinElmer's requirements using reference materials supplied with the DMA 8000.

### **Customer Orientation**

A familiarization checklist will be followed at the time of the installation. The customer must be available at this time. Familiarization content covers the basic operation in the single cantilever, dual cantilever and tension modes. If advanced operational technique training for software or hardware is required contact your sales or service representative before the installation is scheduled.

### Miscellaneous:

# **Cooling System Requirements**

In order to get the maximum instrument performance, it is recommended that a cooling system be used for DMA operations at or below ambient temperature.

### For operation at or above ambient temperature:

The DMA can be configured with a circulating bath, or it can be run without any coolant.

If the coolant chamber of the DMA has been cooled with circulating water it must be completely purged of residual water before using LN2.

# For subambient operations:

It is necessary to install an LN2 dewar accessory.

#### If IQ/OQ Validation is Required for this Instrument:

Please contact your Customer Care Representative. Please visit the PerkinElmer website to obtain the address of your nearest PerkinElmer office.

| Miscellaneous Accessories and Spares |  |  |
|--------------------------------------|--|--|
| Part Number                          | Description  |  |
| N5374092                             | Dynamic Mechanical Analysis: A Practical Introduction by Menard -book  |  |
| N5330268                             | High Temperature Furnace (-180 to 600 C)  Note: this furnace does not have a quartz window.  Note: Using this furnace requires editing the instrument configuration. |  |
| N5337024                             | DMA Photo Adapter Allows use of DSC UV system light guides with DMA 8000. Other UV sources using light guides with the same OD on the guides can also be used        |  |
| N5365048                             | Replacement Omni-cure Light Pipe   |  |
| N5365049                             | Replacement Omni-cure Bulb   |  |
| N5330320                             | Pyrex cup for Fluids Bath (set of three)   |  |
| N5330320                             | Pt 100 Replacement sensor  |  |
| N5330220                             | DMA 8000 Measuring System Kit  |  |
| N5330316                             | Sample Kit Replacements – Acrylic (set of 5)   |  |
| N5330340                             | Sample Kit Replacements – PVC (set of 5)   |  |
| N5330341                             | Sample Kit Replacements – HDPE (set of 5)  |  |
| N5330342                             | Sample Kit Replacements – Polycarb (set of 5)  |  |
| N5330343                             | Sample Kit Replacements – PET Film (set of 5)  |  |
| N5330344                             | Sample Kit Replacements – G10 Epoxy (set of 5)   |  |
| 00090652                             | Sample Kit Replacement – Septum for compression (Set of 5)   |  |
| N5337031                             | End cap for DMA 8000 Vent Cover<br>Recommended for use with<br>N5330401Humidity Chamber  |  |
| N5330405                             | Desiccant for humidity chamber (I kg)  |  |
| N5330402                             | Humidity Generator Sensors - calibrated  |  |
| N5330403                             | Humidity Generator heated line   |  |
| N5330404                             | Humidity Generator Sensor lead   |  |

| Miscellaneous Accessories and Spares Continued |   |  |
|--|---|--|
| Part Number                                    | Description                             |  |
| N5330300                                       | Bending clamps (titanium)               |  |
| N5330301                                       | Shear studs and plate                   |  |
| N5330302                                       | Shear clamp outer assy (pair)           |  |
| N5330303                                       | Outer clamp supports (1 pair) stainless |  |
| N5330304                                       | Outer clamp support (single side only)  |  |
| N5330305                                       | 3 Point bending clamps (titanium)       |  |
| N5330306                                       | Extended bending clamp set              |  |
| N5330307                                       | Miniature 3 pt bending clamp            |  |
| N5330308                                       | Compression insert (titanium)           |  |
| N5330310                                       | Extended nut set (stainless steel)      |  |
| N5330311                                       | Full nut set (stainless steel)          |  |
| N5330312                                       | Tensile clamps (titanium)               |  |
| N5330313                                       | Tensile spacer set (stainless steel)    |  |
| N5330314                                       | Alignment fixture                       |  |
| N5330315                                       | Calibration mass                        |  |
| N5330078                                       | Tensile clamps (titanium)               |  |
| N5330260                                       | Cryo hose kit, non-standard             |  |
| N5330259                                       | Automatic cryo kit type b               |  |
| N5330198                                       | Tool kit-dma8000                        |  |

| Calibration Supplies |  |  |
|----------------------|--|--|
| Part Number          | Description  |  |
| N5330316             | PMMA Test Samples (set of 5)   |  |
| N5330317             | Steel Test Sample  |  |
| N5330318             | Temperature Calibration Kit  |  |
| N5330319             | Traceable Calibration Kit, DMA Testing Kit Includes 6 known samples and instructions |  |

PerkinElmer, Inc. 940 Winter Street Waltham, MA 02451 USA P: (800) 762-4000 or (+1) 203-925-4602 www.perkinelmer.com

